


Always place end element with holddown plate on the backside of the wall panel, unless noted otherwise.

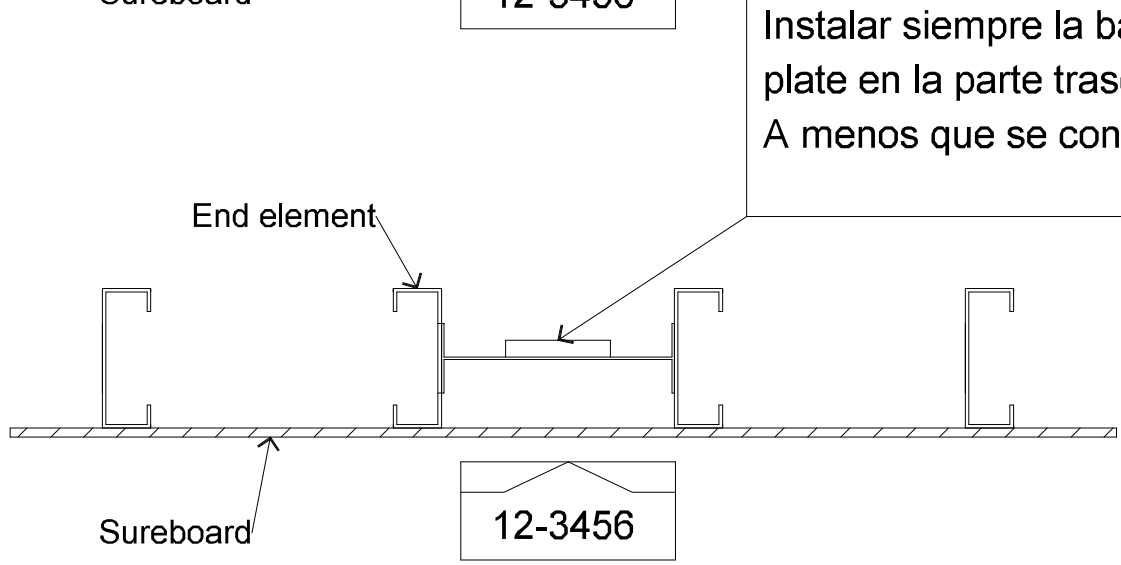

Instalar siempre la barra del paco o holddown plate en la parte trasera de la pared, A menos que se confirme de otra manera.

FrameMax, Inc.
 13915 Danielson Street
 Suite 100
 Poway, CA 92064

Phone: 858 486-7200
 Fax: 909 486-7220
 www.frame-max.com

FRAMEMAX

FM-07-109-JHA
 JEWISH HOME

JHA-14

Holddown Plate location detail 12/12/2008

